


884 DECRYPTOR ULTEGRA NEW FUNCTIONS GUIDE SOFTWARE VERSION 02.030

1. CODE GENERATION

The main page appears on the screen a few seconds after starting the cloning tool and contains the following message:



Press "F3" and the following message appears:

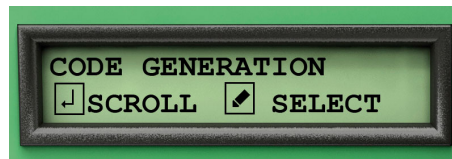

Press "Enter" and browse the list:



1.1. **HOLDEN COMMODORE**

Press "Write" to select:




1.1.1. HOLDEN COMMODORE OLD

Press "Write" to select:




Insert the code through the number keyboard (maximum allowed code: 131071):

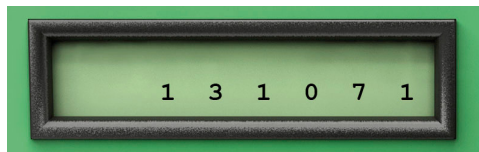

Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

:

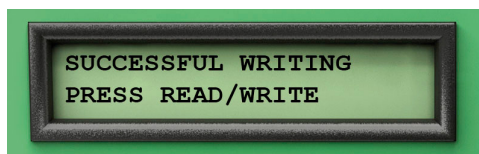

1.1.2. HOLDEN COMMODORE NEW


Press "Write" to select:



Insert the code through the number keyboard (maximum allowed code: 131071) and press "F1" to insert the position of the key in the memory:



Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

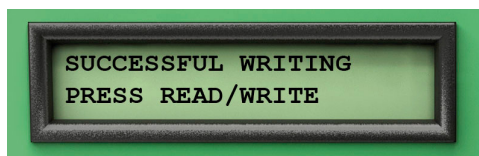


1.2. MEGAMOS MG00


Press "Write" to select (generic / VDO):



Insert the code through the number keyboard or press "Enter" to automatically generate a code:

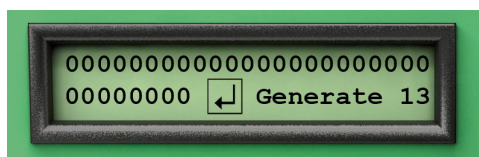

Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

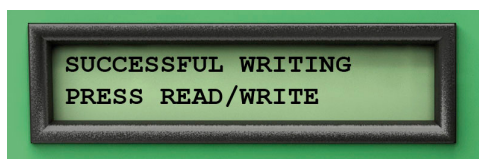


1.3. PHILIPS PH00


Press "Write" to select (FIAT/OPEL/VAG):



Insert the code through the number keyboard or press "Enter" to automatically generate a code:

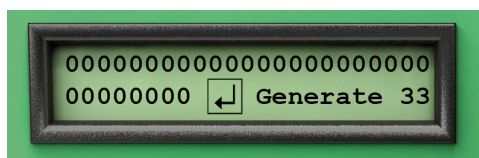

Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

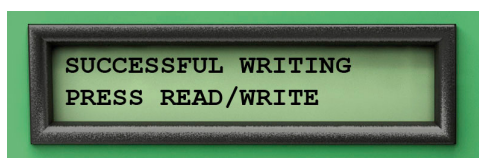


1.4. TEMIC TM10


Press "Write" to select (FIAT):



Insert the code through the number keyboard or press "Enter" to automatically generate a code:

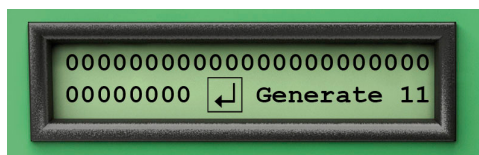

Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

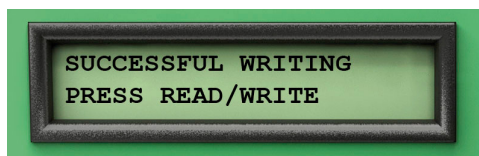

1.5. TEMIC TM20


P Press "Write" to select:



Insert the code through the number keyboard:



Insert the key into the key insertion slot and press "Write" to program the key. Then wait until the following message appears:

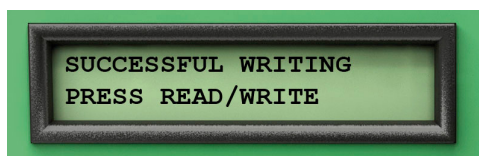


2. RECOVERY PROCEDURE FOR PEUGEOT PH1D ORIGINAL KEY

In the case in which the original key has been removed and the 884 Decryptor Ultegra has been restarted, or whenever a power failure takes place during the analysis of the original key PH1D (the phase during which the message “Do not remove the key!” appears), you can recover the original key, which would be damaged otherwise. Insert the original key into the key insertion slot and press “Read”. Then the following message appears:



Press “write” and the following message appears:

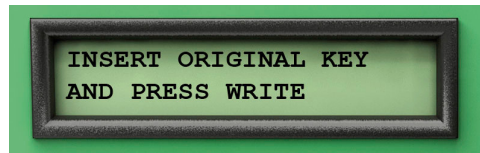

Keep “F1” pressed for three seconds and the following message appears:



Do not remove the key from 884 Decryptor Ultegra during this phase. Wait until the following message appears:



Now the original key has been recovered.